

KEY TO COMPONENTS

- 1 STOP/TAIL LAMP
- 2 FLASHER LAMP
- 3 NO. PLATE LAMP
- 4 FLASHER LAMP
- 5 STOP/TAIL LAMP
- 6 SPEEDOMETER
- 7 REVOLUTION COUNTER
- 8 PANEL LAMPS
- 9 HIGH BEAM INDICATOR LAMP
- 10 IGNITION COIL
- 11 DISTRIBUTOR
- 12 PETROL TANK UNIT
- 13 FUSE UNIT
- 14 STOP LAMP SWITCH
- 15 SIDE (PARKING) AND FLASHER LAMP
- 16 HEADLAMP
- 17 HORNS
- 18 DIPPER SWITCH
- 19 HORN PUSH AND DIRECTION INDICATOR SWITCH
- 20 HEADLAMP
- 21 SIDE (PARKING) AND FLASHER LAMP
- 22 FLASHER UNIT
- 23 CONTROL BOX
- 24 SOLENOID STARTER SWITCH
- 25 STARTER MOTOR
- 26 12V. BATTERY
- 27 DYNAMO
- 28 IGNITION SWITCH
- 29 STARTER SWITCH
- 30 AMMETER
- 31 PANEL LAMP
- 32 PETROL GAUGE
- 33 WINDSCREEN WIPER MOTOR
- 34 PANEL LIGHTING SWITCH
- 35 IGNITION WARNING LAMP
- 36 FLASHER WARNING LAMP
- 37 SCREEN WIPER SWITCH
- 38 PANEL LAMP
- 39 LIGHTING SWITCH
- 40 TEMPERATURE GAUGE
- 41 FUSE (FITTED U.S.A. ONLY)
- 42 OIL PRESSURE GAUGE

OVERDRIVE ONLY :

- 43 STEERING COLUMN SWITCH
- 44 RELAY UNIT
- 45 TO A ON CONTROL BOX
- 46 GEARBOX SWITCH
- 47 OVERDRIVE SOLENOID
- 48 TO IGNITION VIA A3 ON FUSE UNIT

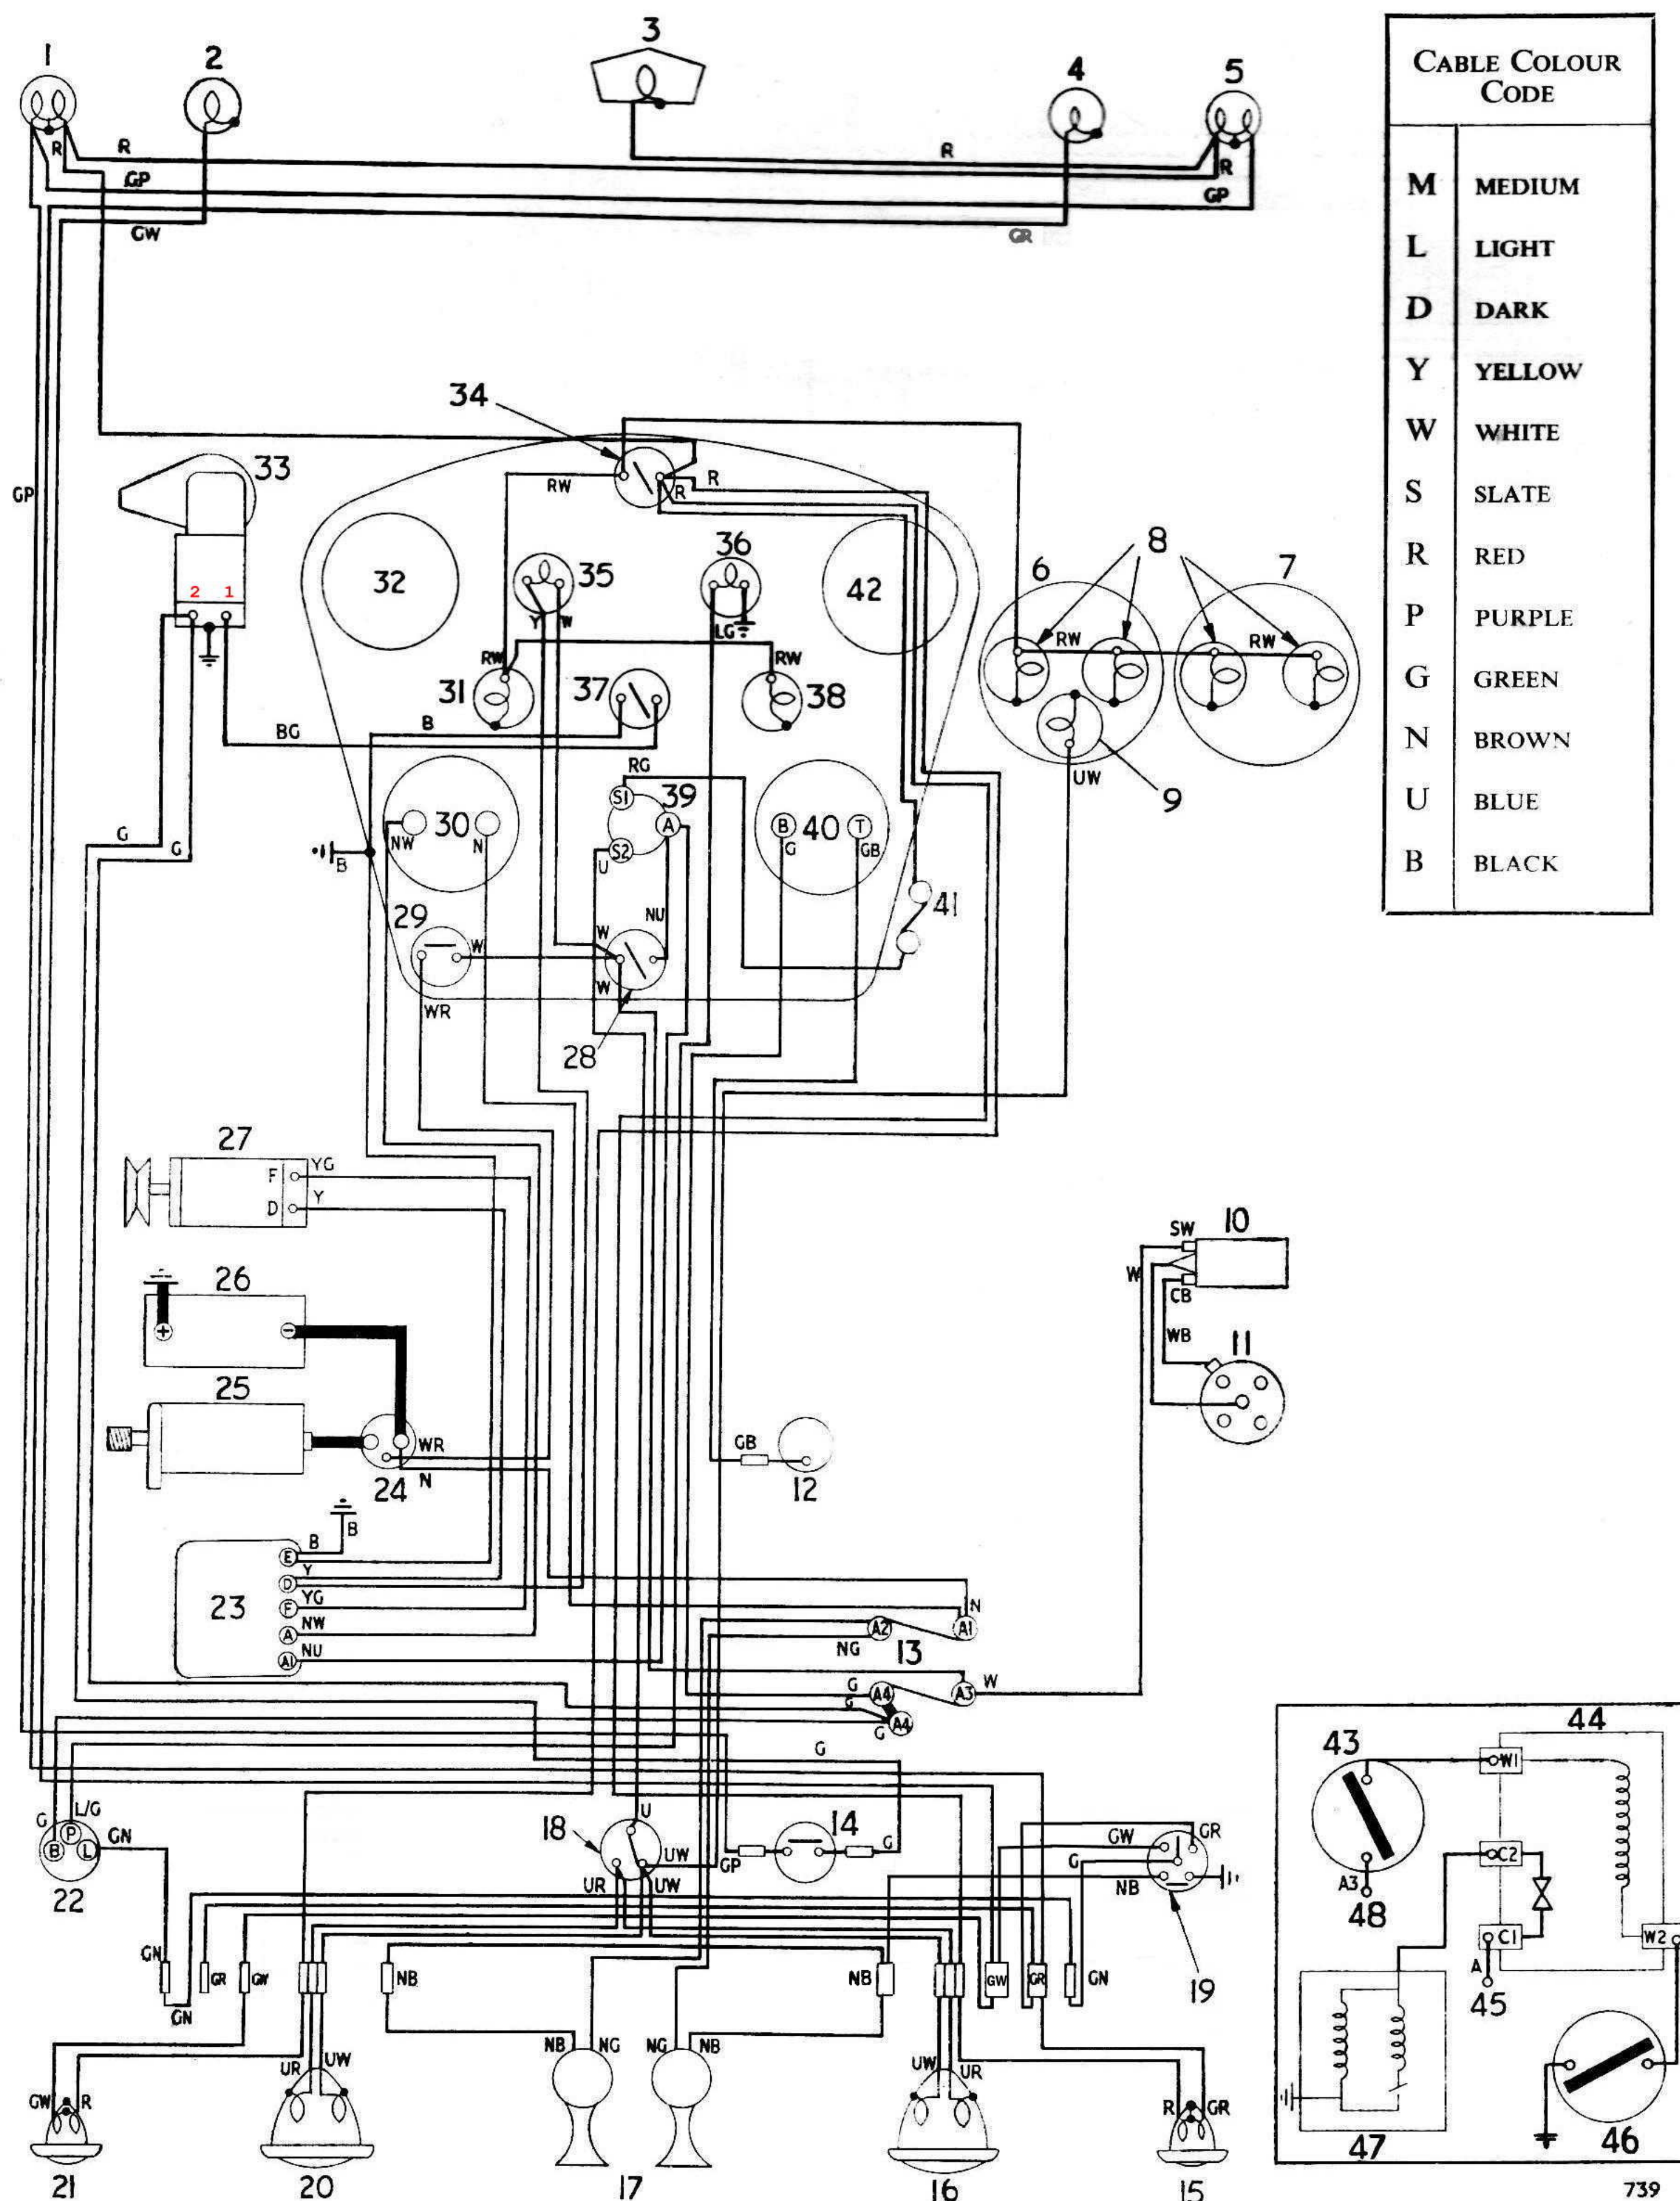


Fig. 30. Wiring Diagram.

Wiring Diagram for
Overdrive Unit